



KHAN arms

**INSTRUCTION MANUAL
FOR SINGLE BARREL SHOTGUN**

**READ THE INSTRUCTIONS AND
WARNINGS IN THIS MANUAL CAREFULLY
BEFORE USING THIS FIREARM**

FIREARMS SAFETY

At Khan, we believe that safe firearms handling is the most important consideration of anyone who uses firearms and ammunition. Please take a few minutes to thoroughly read and understand this instruction manual.

ALL GUNS ARE NOT ALIKE. Many makes and models of firearms may LOOK very similar. However, they differ widely in design and operation, and in the location and function of various controls.

You should completely understand this manual before you practice loading, unloading and firing with live ammunition.

Remember, firearms safety does depend on you!

Serial No. _____

Date Purchased: _____

Purchased From: _____

THIS MANUAL CONTAINS

1. Important warnings, which should be read and understood before using this firearm. **SAFE GUN HANDLING IS YOUR PERSONAL RESPONSIBILITY AT ALL TIMES. Disregarding warnings in this manual may result in injury or death to you and others and damage to property.**
2. Directions and procedures for handling, loading, firing and unloading.
3. Instructions for care, cleaning, repair and service of this shotgun.

This instruction and safety manual is designed to help you in learning how to properly use and care for your Khan Single Barrel shotgun. Only when you are certain you have familiarized yourself with the function of your firearm should you practice loading, unloading and firing live rounds of ammunition.

This instruction manual should always accompany this firearm, and be transferred with it upon change of ownership. Should you ever need to replace it, this manual is available **FREE** upon request from Khan.

DISCLAIMER OF LIABILITY

Khan shall not be responsible for product malfunctioning or for physical injury, death or damage to property resulting from either intentional or accidental discharge of this firearm, its criminal or negligent use, improper or careless handling, unauthorized modifications or alteration, use of defective or improper or hand-loaded or (replaced) ammunition, or from its use for purposes or subjection to treatment for which it was not designed.

For your safety, use only original high quality commercially manufactured ammunition in good condition that is appropriate to the caliber/gauge of your gun.

Khan shall not be responsible for product or its result from use of defective, improper or reloaded ammunition

WARNING – LEAD EXPOSURE

Discharging firearms in poorly ventilated areas, cleaning firearms or handling ammunition may result in exposure to lead and other substances that may cause birth defects, reproductive harm and other serious physical injury. Have adequate ventilation at all times. Wash your hands thoroughly after exposure. Shooting or cleaning guns may expose you to lead.

WARNING:

Prior to removing this gun from its packaging, and prior to loading and firing, carefully and thoroughly read the entire instruction manual which gives advice on the gun's proper handling and functioning. However, your safety and that of others (including your family) depends on your responsible compliance with that advice. If unfamiliar with firearms seek supervised instruction.

FIREARMS SAFETY IS YOUR RESPONSIBILITY.

GENERAL SAFETY WARNINGS

1. Careless and improper handling of this gun could result in unintended discharge causing injury, death or damage to property. Safety must be the first and constant consideration when handling a firearm and ammunition.
2. This shotgun was designed to function properly in its original condition. Alterations can make it unsafe. Do not alter any part or add or replace parts.
3. Shotguns should only be carried with the action open and chamber empty to prevent accidental discharge.
4. **Always handle and treat your gun as if it were loaded** so you never fire it accidentally when you think it is unloaded.

Never take anyone's word it is unloaded. Always check it your self with your fingers off the trigger and the gun pointed in a safe direction.

5. Never place your finger inside the trigger guard unless you intend to fire.

6. Water, snow, mud, excessive lubricating oil or grease or any other material can obstruct the barrel of your gun. Always check the barrel of your firearm for obstruction before loading and firing. Clean a fouled gun immediately to ensure its correct and safe function.

7. Keep the gun's muzzle pointed in a safe direction at all times. Never let the muzzle of a firearm point at any part of your body, another person or at anything you do not intend to shoot. Always be certain of your target before firing.

8. Be sure you have and are using the proper ammunition. Use only high quality ammunition specifically designed for your gauge of shotgun. The barrel is marked with the size of shotshell it will accept. If the barrel is marked "3" it will accept 3 inch and 2 3/4 inch shotshells. **Never load the chamber with a shell that is longer than the chamber is marked.**

9. UNLOAD ALL FIREARMS WHEN NOT IN USE. NEVER STORE A LOADED FIREARM. Firearms and ammunition should be safely stored separately so that they are inaccessible to children or unauthorized users.

10. Always make sure your gun is unloaded before cleaning, storing or handing it to another person.

11. Always wear safety glasses while shooting to protect your eyes from injury by gun powder, gas, lubricant, dirt or metallic particles, carbon residue, sparks or other debris.

12. Always wear ear protection when shooting, especially on a range. Without ear protection, the noise from your gun, and other guns close to you, could leave a "ringing" in the ears for some time after firing. Repeated exposure to shooting noise could result in permanent hearing loss.

13. Never climb a tree, fence or wall while carrying a loaded firearm. Remove ammunition and hand the gun to someone else or place it on the ground on the other side of the obstacle before crossing it yourself. **DO NOT** lean a gun against a tree or other obstacle; it could fall and possibly discharge.

14. **DO NOT** shoot at a hard surface or at water. Bullets and shot can ricochet or bounce off and travel in unpredictable directions with great velocity.

 
15. Firearms and alcohol **DO NOT** mix. Never drink alcoholic beverages or take drugs before or during shooting, as this constitutes criminal disregard for your safety and that of others. Never use a gun while you are taking medication unless you have checked with your doctor to ensure your fitness to handle your gun safely.

16. If you have any doubts about your ability to handle or use this shotgun safely, seek supervised instruction.

17. Horseplay has no place around firearms.
Guns can't think – you can!

18. Remember, safety is your responsibility,
be a safe shooter.

19. **FOLLOW THE LAW:** Obey all local, state and federal laws regarding storage, shooting and transporting your firearm.

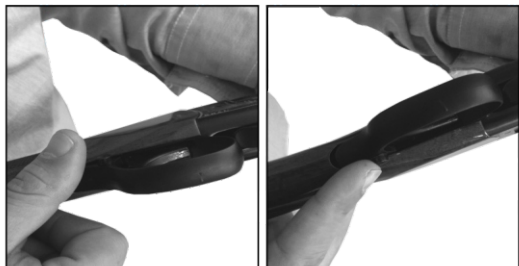

BREAK OPEN LEVER

The Break Open Lever is located in front of the trigger guard and controls the locking of the breech of the barrel to the receiver. To open the gun, pull the Break Open Lever fully rearward and ease down the barrel.

NOTE: Pulling the Break Open Lever partially rearward will not disengage the locking of the breech. The Break Open Lever may appear to be pulled back fully rearward, but is not. Pulling the Break Open Lever slightly further will fully disengage the locking of the breech.

SAFETY BUTTON

The safety button is located at the rear of the trigger guard and must be manually moved to the desired position by the shooter.

To put the safety in the "Safe" or "On" position, the safety button must be pushed from the left side so that it moves all the way to the right. The button must always be pushed fully to the right until it moves no further to be in the "Safe" or "On" position.

The safety button is designed to function only as described above and should not be reversed. **DO NOT** attempt to remove or reverse the safety button. Doing so may result in an unsafe condition which can cause serious injury or death.

WARNING: Do not rely solely on your gun's safety. Treat every gun as if it is loaded and ready to fire. The safety is a mechanical device and is not intended to serve as a substitute for common sense or safe gun handling. Always keep the muzzle pointed in a safe direction.

SELECTOR PIN

The selector pin is located on the forend steel base and must be manually moved to the desired position by the shooter. To get the shotgun in "Ejector" mode , the selector pin must be pushed from left to right side so that it moves all the way to the right and the shotgun gets in " Ejector mode " .

To get the shotgun in "Extractor" mode , the selector pin must be pushed from right to left side so that it moves all the way to the left and the shotgun gets in " Extractor mode " .

The selector pin must always be pushed fully to the right or left until it moves no further to be in the "Ejector" or "Extractor" mode. The selector pin is designed to function only as described above and should not be reversed. DO NOT attempt to remove or reverse the selector pin. Doing so may results in an unsafe condition which can cause serious injury or death.

WARNING : When your shotgun is in "Ejector mode" it ejects both fired or non-fired cartridge , so please be careful while opening your shotgun in " Ejector mode " .



BARREL CHOKE

This Khan Single Barrel shotgun is equipped with a fixed choke.

WARNING: Always make sure the safety is in the "Safe" or "On" position. Visually and physically check the chamber to be certain the shotgun is unloaded before removing, installing or checking the choke tube.

AMMUNITION

Be sure you have and are using the proper ammunition. Use only high quality ammunition specifically designed for your

gauge of shotgun. The barrel is marked with the size of shotshell it will accept. If the barrel is marked "3" it will accept 3 inch and 2 3/4 inch shotshells. **Never load the chamber with a shell that is longer than the chamber is marked.**

STEEL SHOT WARNING

You should be aware of the following differences and cautions:

Never shoot steel shot loads in a full choked barrel or an improved modified choked barrel.

To do so may cause the barrel to swell or rupture. The choke (constriction) in all modern shotguns has been established based on the pattern performance of shot shells loaded with

lead shot. When using steel shot shells, you will notice a different performance in pattern density versus the established lead shot pattern, because steel shot is harder and lighter than lead shot.

In general, steel shot fired with a modified choke will produce the equivalent of a lead shot full choke pattern. This is true of all steel shot sized up to and including no. 2. The established improved cylinder choke will produce the equivalent of a (lead) modified pattern.

All steel shot sized larger than no. 2, and including special sized such as BB, BBB, T, F, etc., should be used with improved cylinder and cylinder (skeet) chokes. These steel shot sizes, when used in an improved cylinder choke, will produce the equivalent to (lead) full choke patterns. The cylinder choke or bore will produce the equivalent of a modified (lead) pattern.

WARNING: THE ACCIDENTAL LOADING AND DISCHARGE OF SHELLS OF THE WRONG GAUGE IN YOUR GUN CAN RESULT IN DAMAGE TO YOUR GUN AND INJURY TO THE SHOOTER AND/OR OTHERS. To be safe, carry only the proper gauge ammunition when shooting.

LOADING

WARNING: Read and understand all instructions and warnings in this manual **BEFORE** using this shotgun. It is important to learn the parts of your shotgun and their functions before using this firearm. Be sure of the target and what is beyond before firing.

To load your Khan Single Barrel shotgun, be sure the safety is in the "Safe" or "On" position, pull the Break

Open Lever fully rearward and open the action. This will cause the lock to disengage and allow the barrel to pivot downward exposing the chamber. Insert shotshell of the appropriate gauge and size into the chamber. When you are finished loading the

chamber, close the breech by lifting up on the barrel and close the action. The Break Open Lever will make an audible "Click" when the breech is closed and locked.

FIRING

WARNING: Read and understand all instructions and warnings in this manual **BEFORE** using this shotgun. It is important to learn the parts of your shotgun and their functions before using this firearm. Be sure of your target and what is beyond before firing.

After inserting the shotshell into the chamber, close and lock the breech. Your shotgun is ready to fire. Disengage the safety by pushing the safety button to the "Fire" or "Off" position, the safety button must be pushed from the right side so that it moves all the way to the left. The button must always be pushed fully to the left until it moves no further to be in the "Fire" or "Off" position. This will display a red band marking around the safety as an indicator that the safety is in the "Fire" or "Off" position.

For Khan Single Barrel shotguns, pulling the trigger through its full travel to the rear will fire the shotgun and discharge the shell.

Caution: In case of a misfire, wait at least 30 seconds while keeping the gun pointed in a safe direction. Then, carefully open the action away from yourself and others. If the primer on the rim is indented, the shell should be discarded in a manner that would prevent accidental injury to you and/or those

around you. If there is no indentation on the primer or rim, your gun has malfunctioned and should be serviced by a qualified gunsmith. If the gun is under warranty it must be serviced by an authorized Khan Gunsmith to not void warranty.

If at any time during firing, the sound of any shell is noticeably louder or softer than the previous shells fired, **STOP! DO NOT** load or fire additional shells until you have put the safety in the "Safe" or "On" position and safely unloaded your shotgun. Inspect the shotgun for possible damage or obstructions in the chamber or bore. (The bore is the inside surface of the barrel). Firing the shotgun with a bore obstruction can cause damage to the firearm and may result in serious injury to you and/or those around you.

UNLOADING

WARNING: Read and understand all instructions and warnings in this manual **BEFORE** using this shotgun. Always keep the shotgun pointed in a safe direction and the safety in the "Safe" or "On" position.

Before unloading, check to assure that the safety is in the "Safe" or "On" position. At no time during unloading should you allow your fingers or any other object to touch the trigger. Next, pull the Break Open Lever fully rearward and open the

action. Pulling the barrel downward fully will partially elevate any fired or unfired shell in the chamber for easy removal by hand.

MAINTENANCE AND CLEANING

CAUTION: Make sure the gun is UNLOADED

1. Make sure the broad, polished finely fitted mating surface of the breech block and receiver is especially clean and lightly oiled with high quality gun oil. **DO NOT** use silicone or lanolin.
2. Run an oil patch through the bore with a cleaning rod starting from the breech end. To prevent leading, use a cleaning solvent and brass brush to clean the bore periodically. Follow this cleaning with one or two clean oil patches.
3. Wipe all exposed metal surfaces with an oiled cloth before storing. **DO NOT** squirt or pour oil into the inside mechanism because it may hamper proper functioning. After extended periods of heavy use, your gun should be taken to a qualified gunsmith to have the action disassembled for professional cleaning and lubrication.

 
STORAGE

Clean thoroughly and oil your gun before storage. Store your firearm in a dry place to prevent corrosion. **Store the gun away from children and in a place where it cannot be obtained by those unauthorized to use it. Always store gun unloaded and separately from any ammunition.**


USE YOUR SHOTGUN CAREFULLY AND SAFELY

HAZARDOUS MATERIAL WARNING

Discharging firearms in poorly ventilated areas, cleaning firearms or handling ammunition may result in exposure to lead and other substances that may cause birth defects, reproductive harm and other serious physical injury. Have adequate ventilation at all times. Wash your hands thoroughly after exposure. Shooting or cleaning guns may expose you to lead.

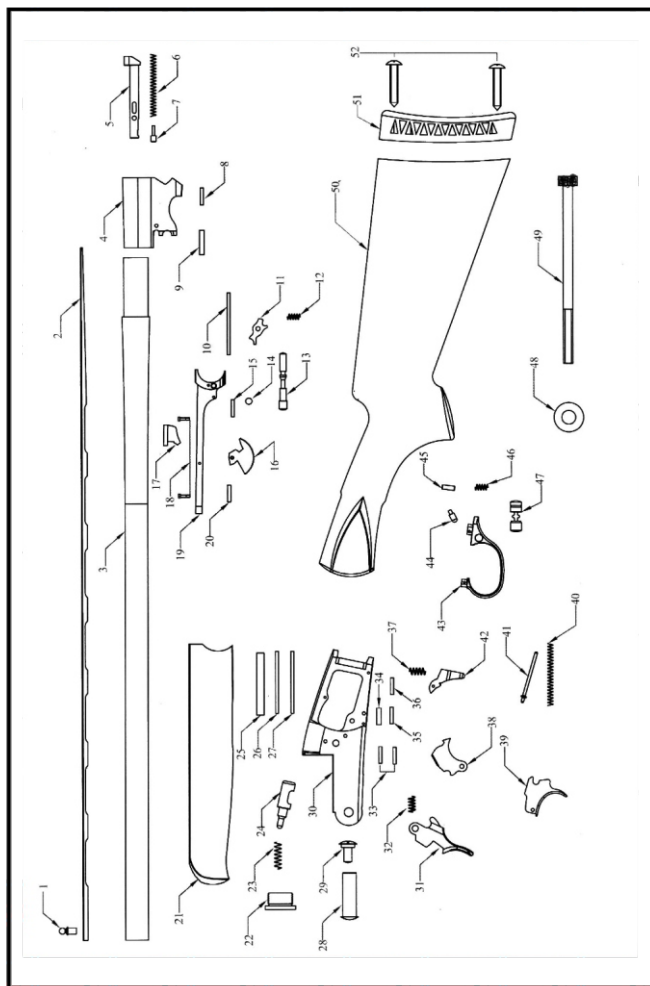

PART NO	DESCRIPTION	PART NO	DESCRIPTION
1	Front Sight	27	Pin
2	With Rib	28	Receiver Pin
3	Barrel	29	Receiver Pin Screw
4	Mono Block	30	Receiver
5	Ejector	31	Lock
6	Ejector Spring	32	Lock Spring
7	Ejector Spring Pin	33	Trigger Guard Pin
8	Ejector Front Pin	34	Hammer Pin
9	Ejector Rear Pin	35	Trigger Pin
10	Forend Ejector Pin	36	Disconnecter Pin
11	Forend Bolt	37	Disconnecter Spring
12	Forend Bolt Spring	38	Hammer
13	Selector Pin	39	Trigger
14	Selector Ball	40	Hammer Spring
15	Selector Pin Pin	41	Hammer Spring Pin
16	Forend Lock	42	Trigger Propulsive Block
17	Forend Lock Part	43	Trigger Guard
18	Forend Steel Base Screw	44	Safety Plunger Spring Pin
19	Forend Steel Base	45	Safety Spring Retaining Pin
20	Forend Steel Base Pin	46	Safety Plunger Spring Pin
21	Forend	47	Manuel Safety
22	Forhead	48	Stock Bolt Lock Washer
23	Firing Pin Spring	49	Stock Bolt Screw
24	Firing Pin Spring	50	Stock
25	Pin	51	Recoil Pad
26	Pin	52	Recoil Pad Screw

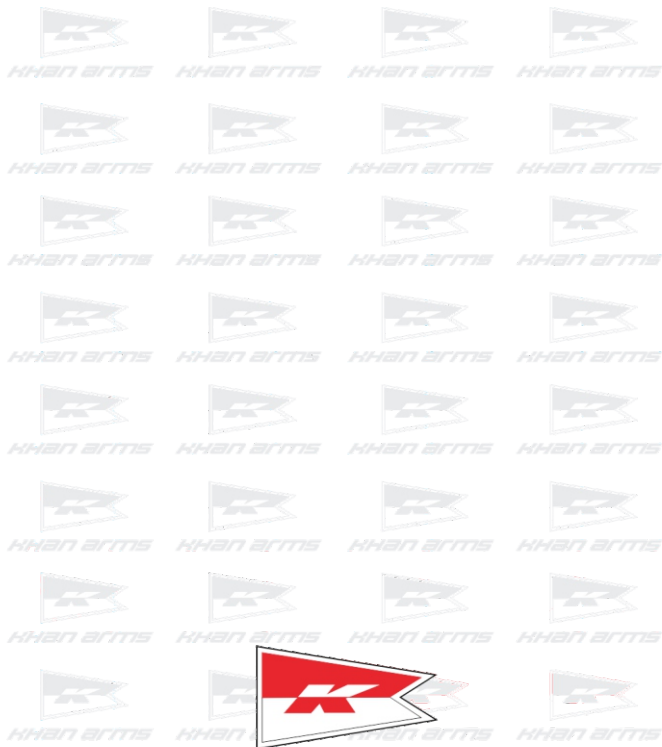 

KHAN ARMS

Kayhan Av Tüfekleri San. Ve Dış Tic. Ltd. Şti.

Yeni Sahra Mah. Necla Sk. No:22 Ataşehir / İstanbul

Tel: +90 216 632 75 55 Fax : +90 216 632 74 44

www.khanarms.com